


Recowa Android Installation Guide

BEFORE START TO INSTALLATION OF RECOWA DEVICE , FOLLOW 2 STEPS BELOW.

- 1) Turn on Mobile Phone's 'MOBILE DATA' and 'WI-FI'
- 2) Change HOTSPOT NAME and HOTSPOT PASSWORD as shown in the below.


Hotspot Name : Warmhaus

Hotspot Password : 12345678

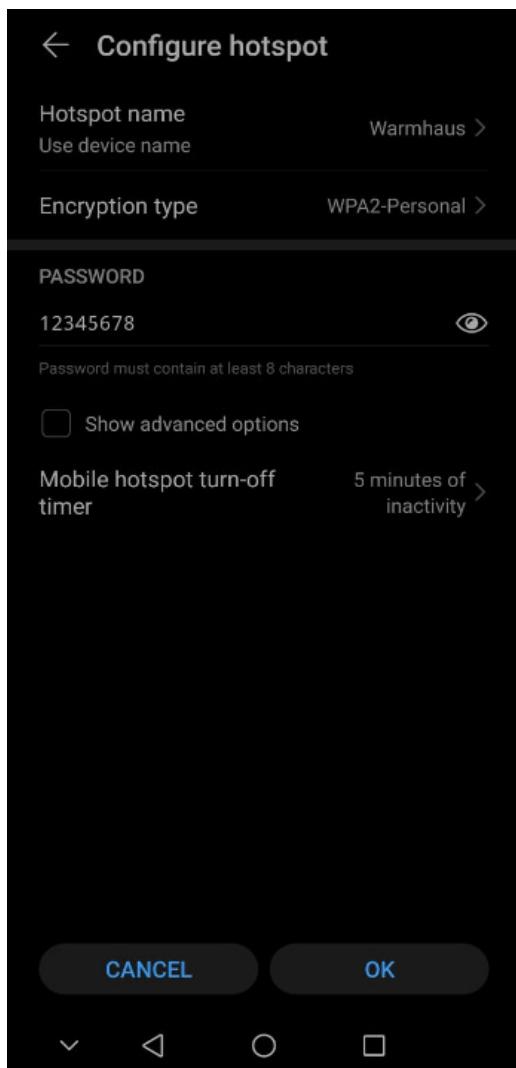


COMMISSIONING



- 1) Click 'Create Account' and scan the QR Code of Recowa device as shown in the below.

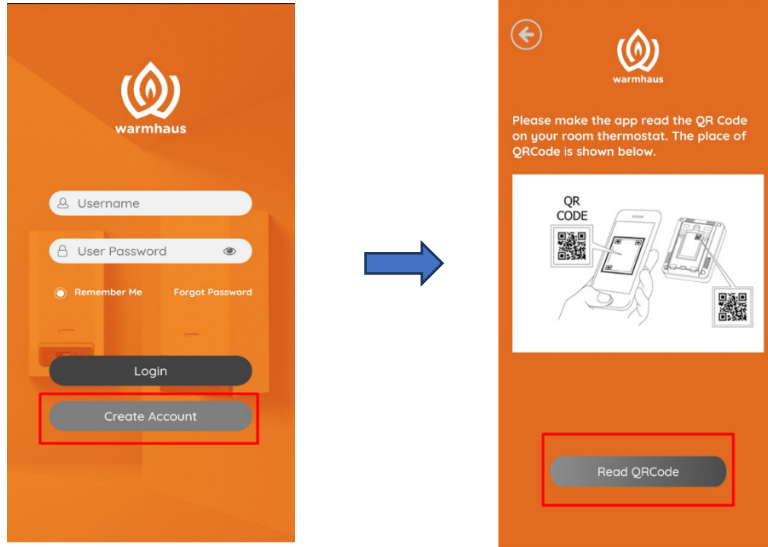


- 2) When you Scan QR code you will see informations of your Recowa device on the screen. Dont change anything on the screen just click to 'Continue'

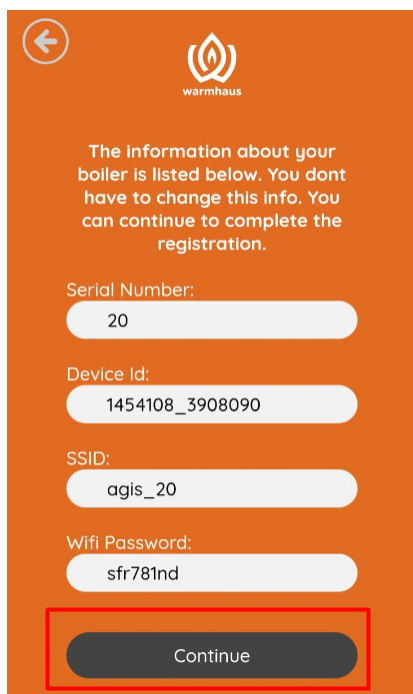


- 3) There is required serial number of Boiler. There are 2 options for it. Text by manually or Scan QR code of Boiler as shown in the below. Click 'Continue' after appears serial number on the screen (or after text manually)

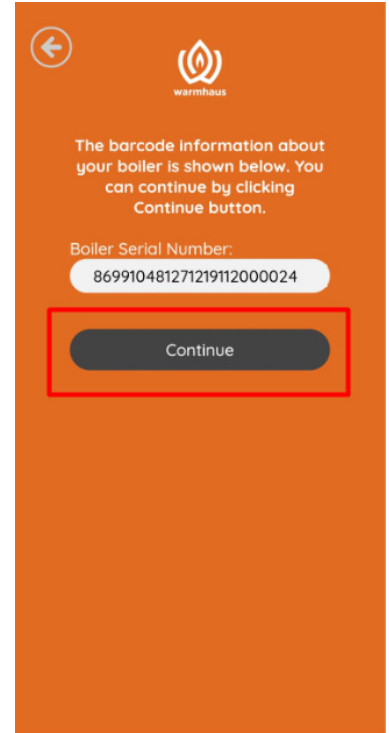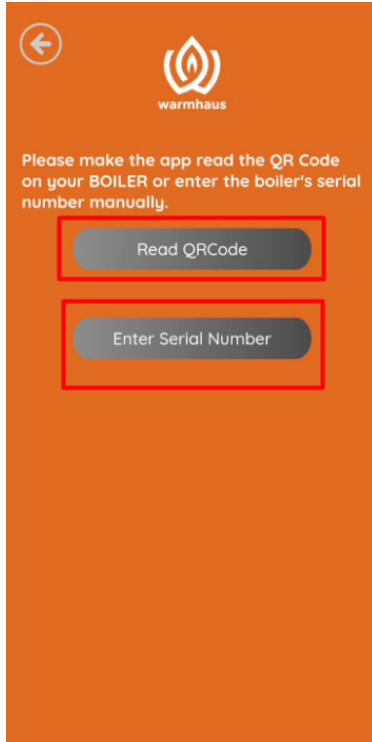


- 4) Choose your WIFI Name and text your WIFI Password then click to 'Save'

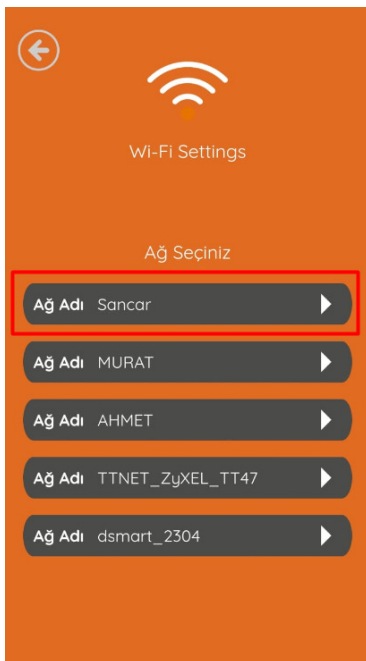

- 5) Turn Off your WIFI connection on the phone. (Cellular Data has to be turned on, LTE,3G or 4G)
Turn On Hotspot Connection on your Mobile Phone and follow the instructions by clicking to 'Continue'

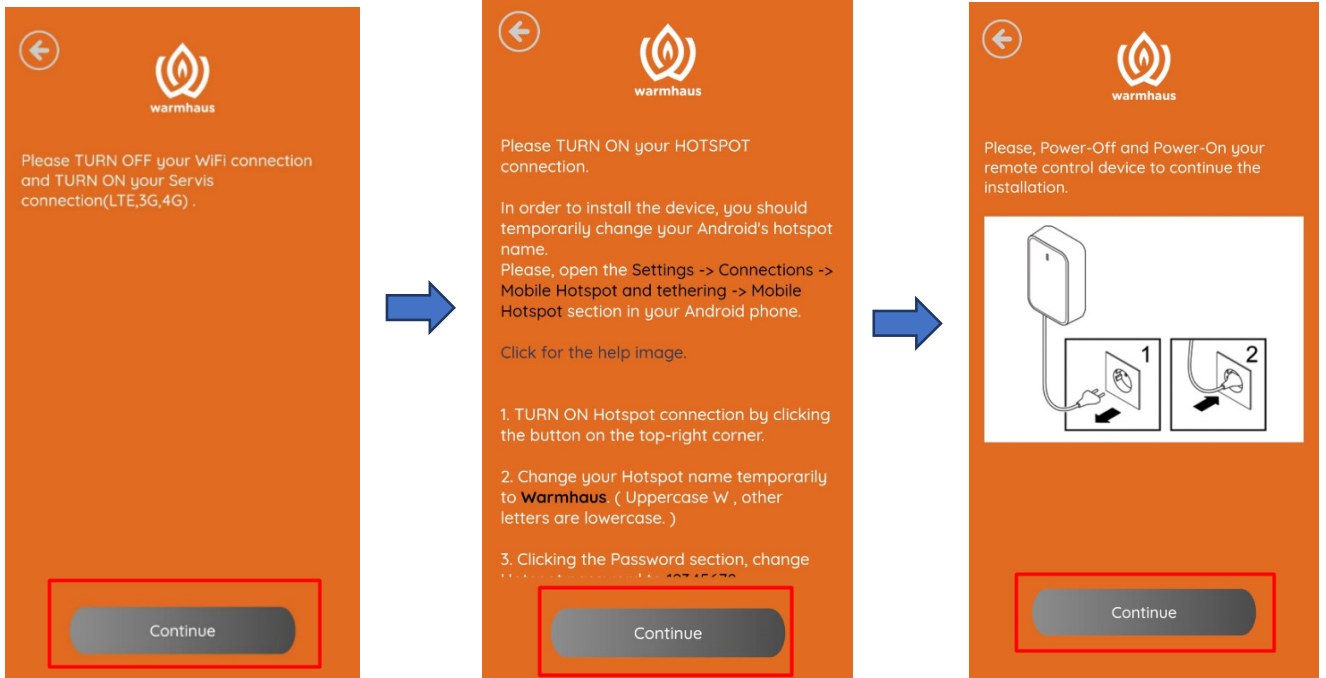


- 6) Wait for the installation check and click to continue when it is done.

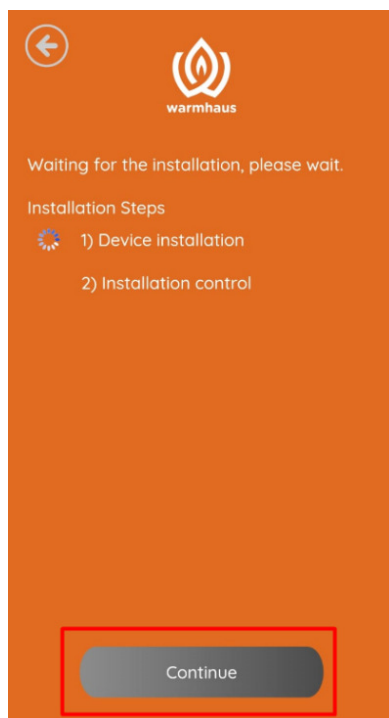

7) Creating User Information

Fill the following informations on the screen and create an account. (It is important to text correct email address) After click to 'Create Account' , there will be sent verification email. The customer has to connect to email address and click to related link.

The customer login to the application with the account that have created on the 'Creating User Information' screen.

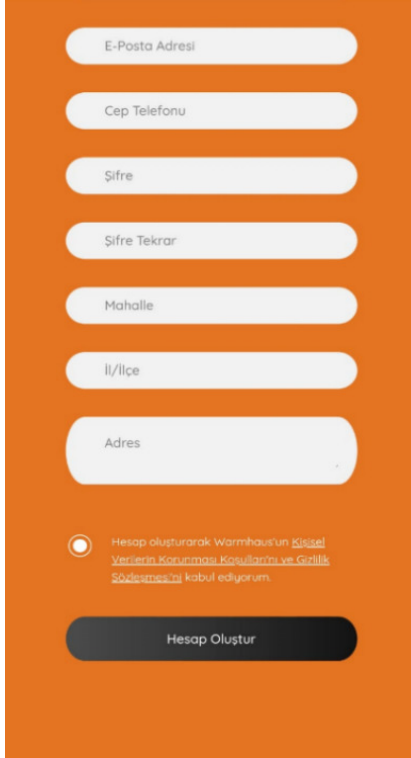

E-Posta Adresi

Cep Telefonu

Sifre

Sifre Tekrar

Mahalle

Il/ilce

Adres

Hesap oluşturarak Warmhaus'un [Gizli Verilerin Korunması Koşullarına](#) ve [Gizlilik Sözleşmesini](#) kabul ediyorum.

Hesap Oluştur

8) After the Installation of Recowa done, the user can change Hotspot Name and Password as wish