Recowa iOS Installation Guide

1) Turne on Mobile Phone's 'CELLULAR DATA' and   'WI-FI'
2) Change PERSONAL HOTSPOT NAME and PERSONAL HOTSPOT PASSWORD as shown in the below.

Personal Hotspot Name :   Warmhaus

Personal Hotspot Password   :   12345678
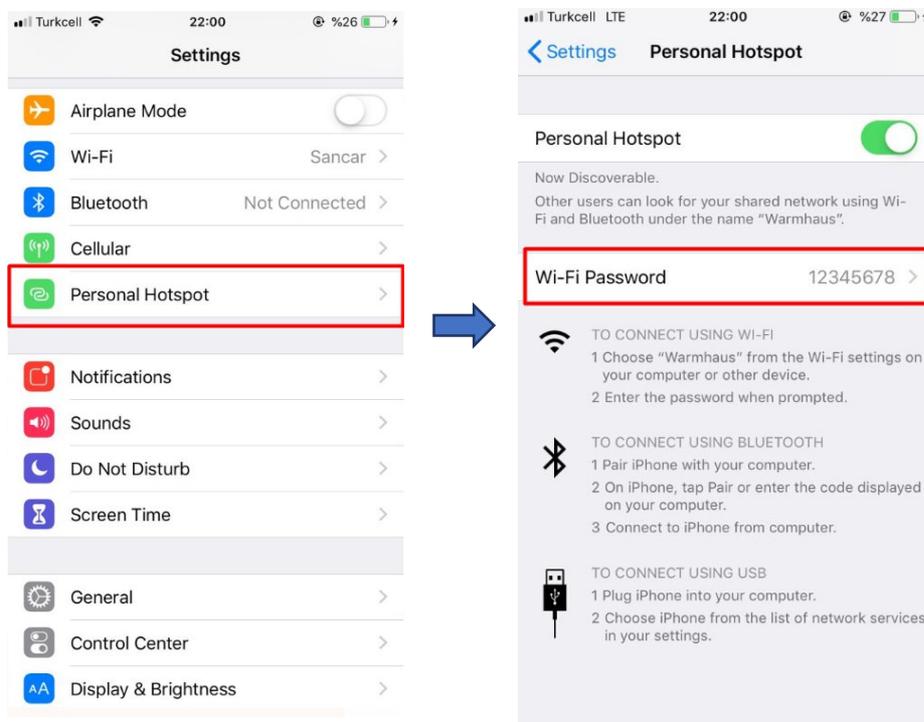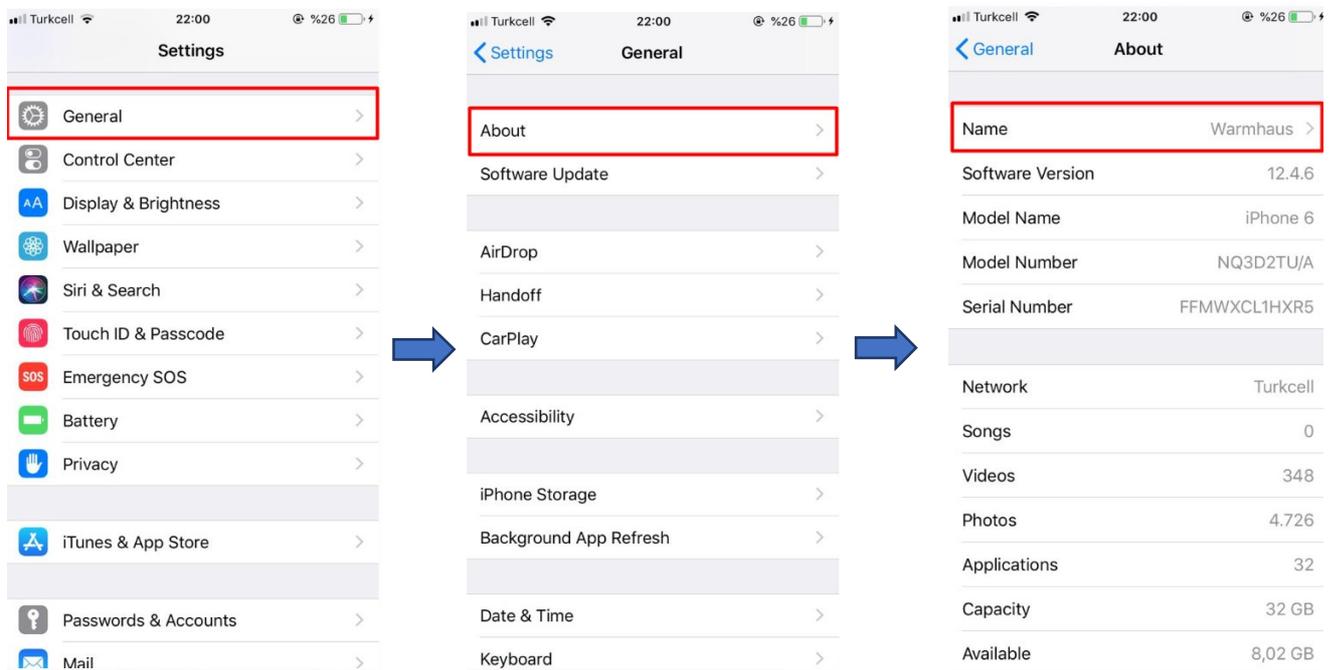
COMMISSIONING

1) Click 'Create Account' and scan the QR Code of Recowa device as shown in the below.

2) When you Scan QR code you will see informations of your Recowa device on the screen. Don't change anything on the screen just click to 'Continue'
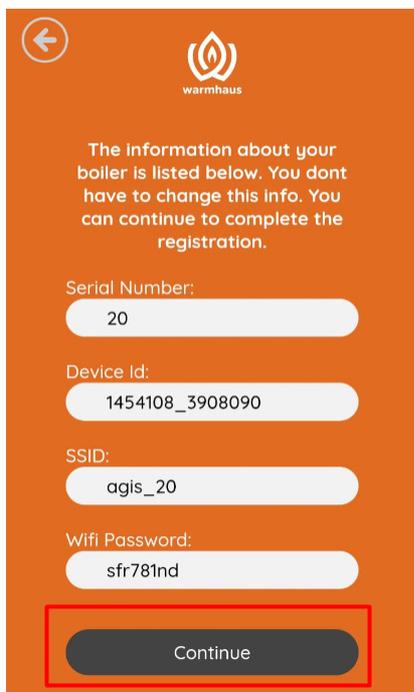
3) There is required serial number of Boiler. There are 2 options for it. Text by manually or Scan QR code of Boiler as shown in the below. Click 'Continue' after appears serial number on the screen (or after text manually)
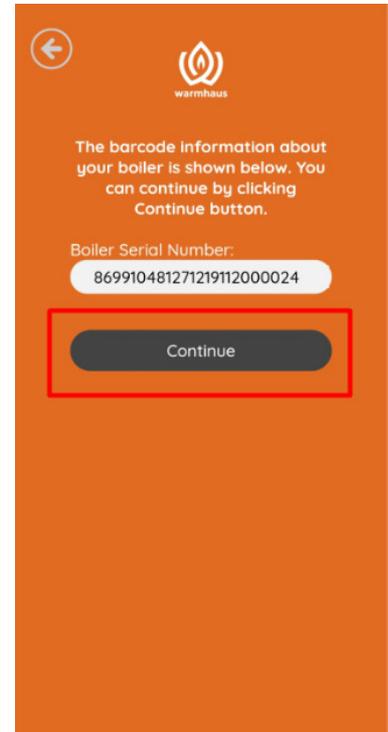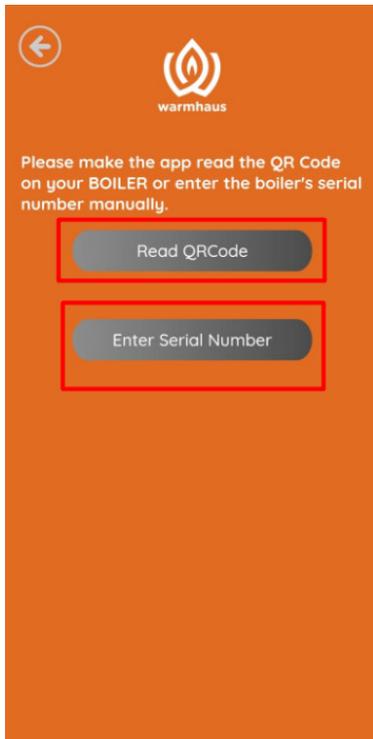
4) Text your WIFI Name on SSID and text your WIFI Password by manually and click to 'Save'

5) Turn Off your WIFI connection on the phone. (Cellular Data has to be turned on, LTE,3G or 4G) Turn On Hotspot Connection on your Mobile Pnone and follow the instructions by clicking to 'Continue'
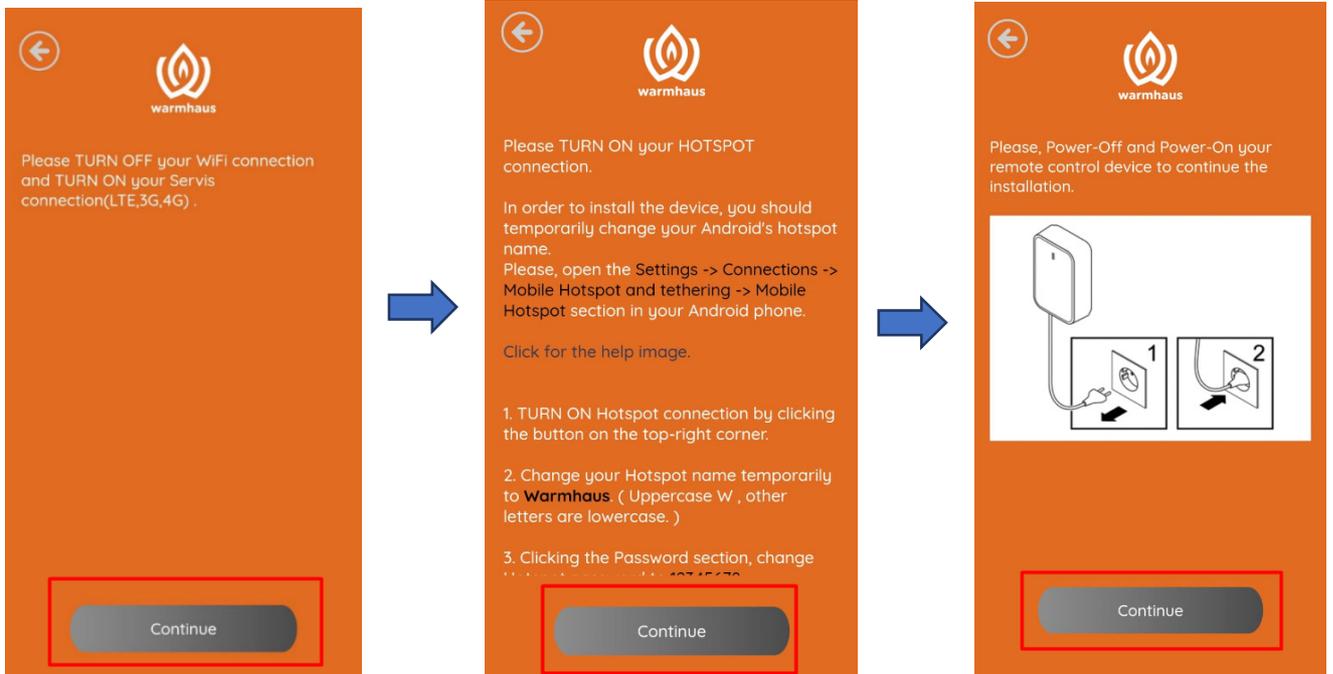
6) Wait for the installation check and then click to continue.

7) Creating User Information

Fill the following informations on the screen and create an account. (It is important to text correct email address) After click to 'Create Account' , there will be sent verification email. The customer has to connect to email address and click to related link.

The customer login to the application with the account that have created on the 'Creating User Information' screen.
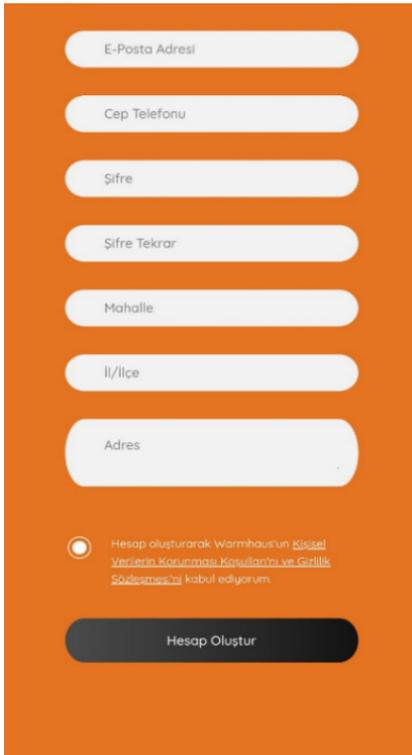
E-Posta Adresi

Cep Telefonu

Şifre

Şifre Tekrar

Mahalle

İl/İlçe

Adres

Hesap oluşturarak Warmhaus'un Kişisel Verilerin Korunması Koşulları'nı ve Gizlilik Sözleşmesi'ni kabul ediyorum.

Hesap Oluştur

8) After the Installation of Recowa done, the user can change Hotspot Name and Password as wish